
快速指南 >>> 星光眼® | 智能焊接专用相机 (130瞳距) SVersion-HJ-RGBD-130

1 产品介绍

星光眼®智能焊接专用相机 是为智能焊接应用而设计的主动式双目立体视觉3D相机产品,可快速 生成点云数据模型、RGBD数据、深度图、灰度图、彩色图等结果数据信息。同时适应多种复杂 环境,在强光、反光、黑色物体吸光等场景下依然支持高精度建模。它作为焊接系统的视觉输 入,可以配合软件实现工件扫描、焊缝提取、焊缝规划、焊缝跟踪等功能,动静态一体。

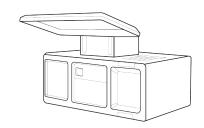


2 物品清单


- 相机×1
- 电源线和适配器 × 1
- 千兆网线 × 1

3 硬件安装

1. 使用安装转接件,将相机固定到机械臂上,如下图所示。相机底 面和背面有安装孔,可固定安装转接件。

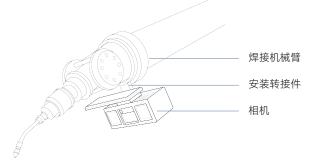

 2. 安装电源线和网线,请注意对准插座上的缺口,如下图所示。插 拔电缆不要使用蛮力,以免破坏插针。




- 3. (可选) 将外部信号连接到相机配套的触发线缆,实现"电平使能" 控制。更多信息请参考《智光眼相机用户指南》。
 - 紫色线缆 (触发输入信号_2)
 - 蓝色线缆 (触发输入信号 2-地)


4 更换保护罩(可选)


如果需要清洁或更换相机保护罩,请按如下步骤操作:


- 1. 使用双指按住保护罩卡口,同时用力,往里按压。
- 2. 在此同时,使用另一个手往外拉动保护罩。

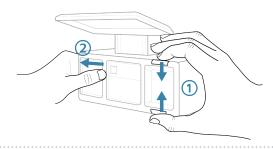

5 尺寸和安装孔位置

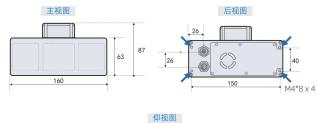

 

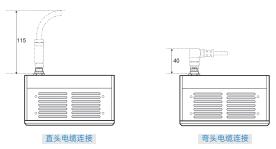

6 注意事项

⚠ 注意 本设备为高精度设备,请阅读并遵守下面的要求:

分类	项目	要求
电源	电源输入	相机电源输入: 24V±4V 电流≥2A 符合接地规范。 220V交流电需提供符合国标。
	设备上电	安装电源线时,请先连设备端,然后再连供电端。
	断电要求	安装设备和拆除设备时,必须先断开电源。
	稳定	确保设备安装牢靠、电缆不松动。确保工作时设备不抖动,以免影响精度。
设备	结构	请轻拿轻放设备,避免使其受到强烈的冲击或震动。
	电磁	切勿将设备靠近强磁物品。请做好静电防护并使设备远离 电磁辐射。
	清洁	请持续保持设备玻璃视窗的清洁。
	完整	切勿擅自拆卸设备,同时确保各类配件的完整。
人员 安全	人身安全	请谨慎操作,安装时避免划伤、砸伤或坠落。
	保护	切勿直视激光,同时避免激光照射皮肤。

回 说明

- 由于产品升级或其他原因,本文档内容会不定期 进行更新。除非另有约定,本文档中的所有内容 不构成任何明示或暗示的担保。
- 如需了解更多产品内容,请访问公司网站。






Quick Guide

ViEye

1 Product Introduction

ViEye intelligent welding dedicated camera is an active binocular stereo vision 3D camera designed for intelligent welding applications. It can quickly generate point cloud data models, RGBD data, depth maps, grayscale images, color images, and other result data information. It is also adaptable to various complex environments, supporting high-precision modeling even in scenarios such as strong light, reflections, and black objects with light absorption. As a visual input for welding systems, it can work with software to achieve functions such as workpiece scanning, weld seam extraction, weld seam planning, and weld seam tracking, integrating both dynamic and static functions.

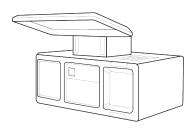


2 Bill of Materials

- Camera × 1
- Power Cable and Adapter × 1
- Gigabit Ethernet Cable × 1

3 Hardware Installation

 1. Use the installation adapter to mount the camera onto the robotic arm, as shown in the diagram below. The bottom and back of the camera have mounting holes for securing the installation adapter.



2. Install the power cable and network cable, ensuring the connectors align with the notches on the sockets, as shown in the image below. Do not use excessive force when plugging or unplugging cables to avoid damaging the pins.





Power Cable Interface


Ethernet Cable Interface

- 3. (Optional) Connect external signals to the camera's trigger cable to enable " level enable " control. For more information, please refer to the Camera User Guide.
 - Purple Cable (Trigger _ Input Signal 2)
 - Blue Cable (Trigger Input _ Signal 2 Ground)


4 Replace the Protective Cover (Optional)

If you need to clean or replace the camera's protective cover, follow

- 1. Use two fingers to press down on the cover latch while applying force inward.
- 2. At the same time, use your other hand to pull the protective cover outward.

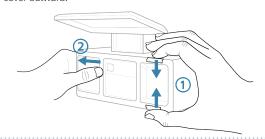

5 Dimensions and Mounting Hole Locations

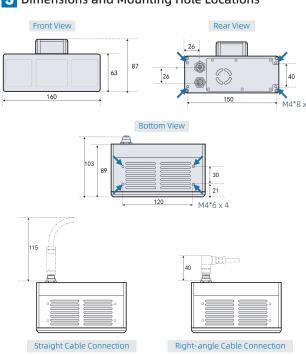

6 Precautions

(A) Caution This device is a high-precision equipment. Please read and follow the requirements below:

Category	Item	Requirements
Power	Power Input	Camera power input: 24V ± 4V, current ≥ 2A , complies with grounding regulations . 220V AC must meet national standards .
	Power On	When installing the power cable , first connect the device side , then connect the power supply side . $ \\$
	Power Off	When installing or removing the device , the power supply must be disconnected first. $ \\$
	Stability	Ensure that the device is securely installed and the cables are not loose . Make sure the device does not shake during operation to avoid affecting accuracy .
	Structure	Please handle the device with care to avoid strong impacts or vibrations .
Equipment	Electromagnetic	Never place the device near strong magnetic objects . Ensure proper electrostatic protection and keep the device away from electromagnetic radiation.
	Cleaning	Please continuously keep the device's glass window clean.
	Completeness	Never disassemble the device without authorization, and ensure that all accessories are complete.
Personal Safety	Safety	Handle with care during installation to avoid scratches, impacts, or dropping.
	Protection	Never look directly at the laser, and avoid laser exposure to the skin.

Note

- . Due to product upgrades or other reasons, the content of this document may be updated periodically. Unless otherwise agreed, all content in this document does not constitute any express or implied warranty
- For more information about the product, please visit the



